


- 1** SUNSHADE
- 2** VELCRO PAD

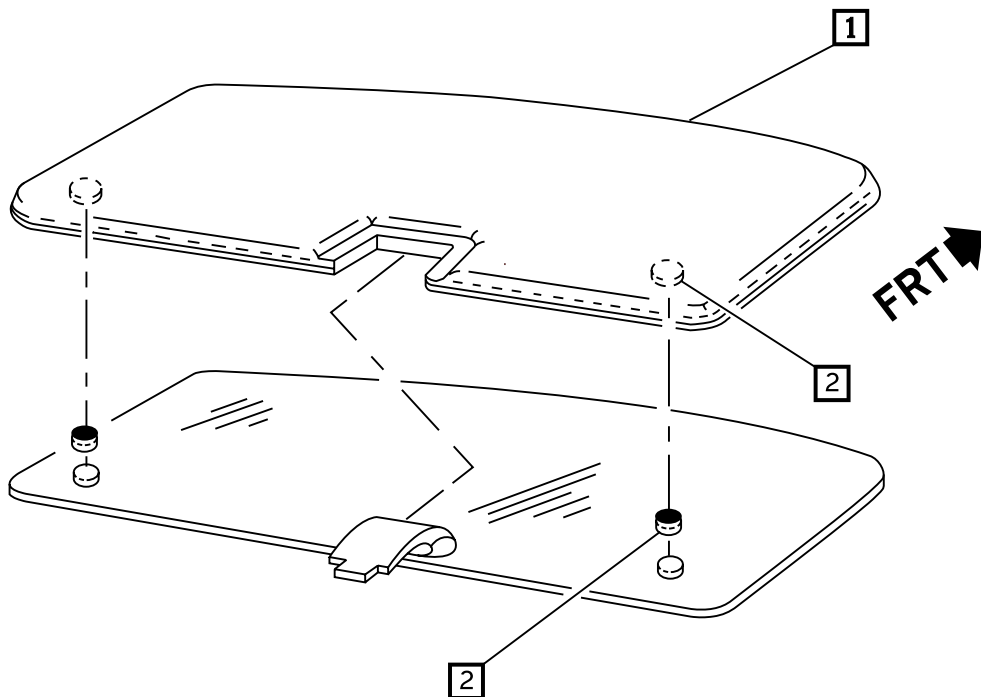

SUNSHADE PANEL INSTALLATION - PROCEDURE

1. REMOVE VISTA VENT GLASS PANEL FROM VEHICLE AS DIRECTED IN OWNER'S MANUAL.
2. PLACE GLASS PANEL ON TABLE: TOP SIDE DOWN. (USE A SOFT CLOTH ON TABLE TO PROTECT GLASS FROM SCRATCHING)
3. LOCATE ADHESIVE BACKED VELCRO BUTTONS ON CORRESPONDING VELCRO PATCHES ON SUNSHADE PANEL. REMOVE BACKING PAPER FROM VELCRO BUTTONS. LOCATE PANEL UNDER FLANGE OF LATCH MECHANISM AS SHOWN IN ILLUSTRATION AT LEFT. (USE CARE DURING THIS STEP SO THAT SUNSHADE PANEL REMAINS IN LOCATION FOR PROPER FIT TO HEADLINDER). LOWER PANEL INTO POSITION AND PRESS FIRMLY OVER VELCRO BUTTONS TO ENSURE PROPER ADHESION TO GLASS.
4. REINSTALL VISTA VENT AND LATCH MECHANISM AS INSTRUCTED IN OWNER'S MANUAL.

FASTENER TORQUE	GENERAL INSTRUCTION NOTES	FIERO		
<ul style="list-style-type: none"> 1 2 3 T FULLY DRIVEN, SEATED & NOT STRIPPED 	<p style="font-size: 2em; color: gray;">002727</p>	TITLE		<p>SUNSHADE INSTALLATION INSTRUCTION</p>
		DATE	PART NO. 10054992	SHEET 1 OF 1